


MV-RD Installation Instructions

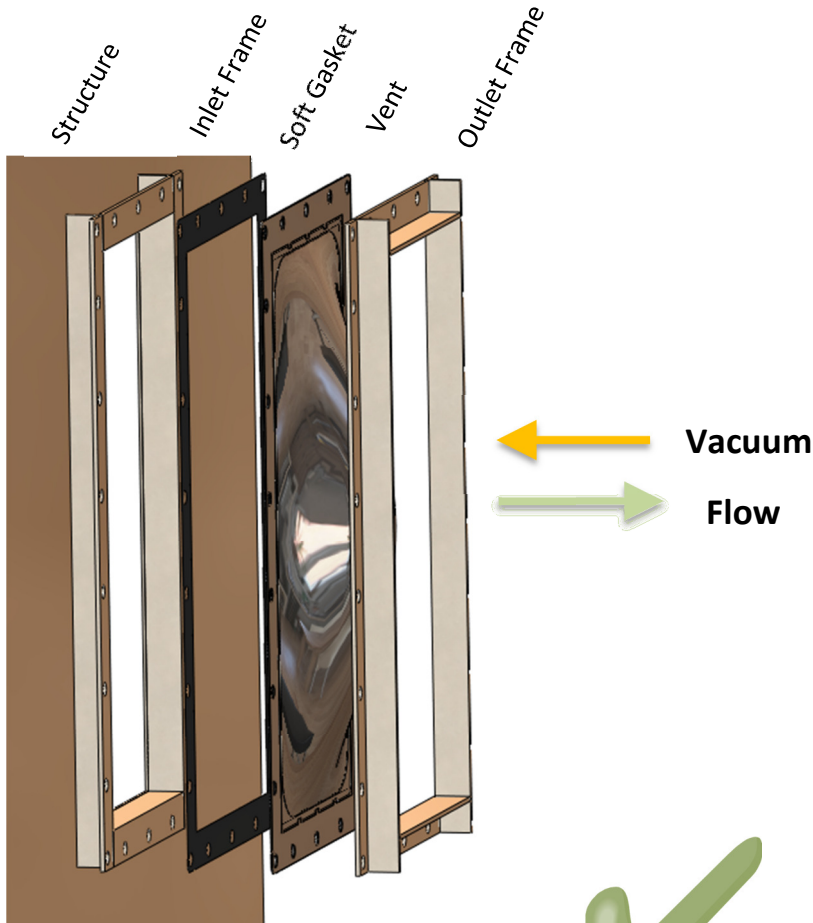



Ensure system is depressurized and safe for human exposure

Vent should have an open discharge area away from personnel and equipment

A soft gasket material is required between the Vent and the inlet Frame

Apply appropriate torque to bolts

Bolt Diameter	Torque (min)
1/2"	25 ft-lbs (300 in-lbs)

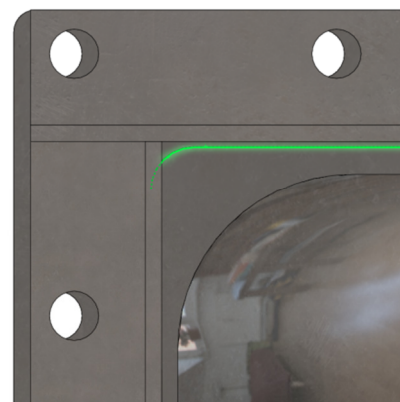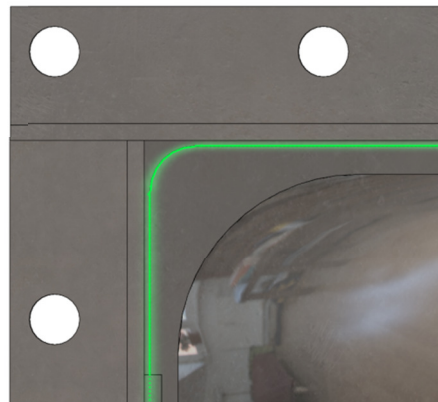

Frame must leave slit visible or vent will not open properly

